



TYP. ROUGH OPENING REINFORCEMENT W/ OM JOINT FABRIC

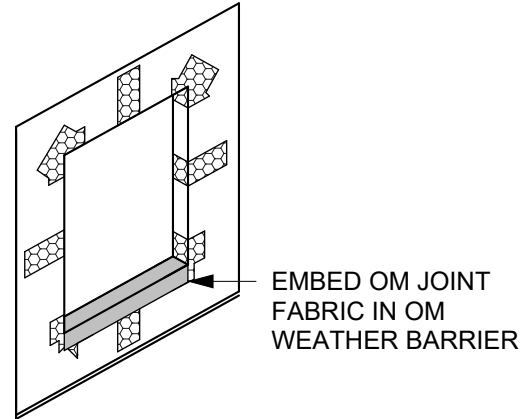


SYSTEMS

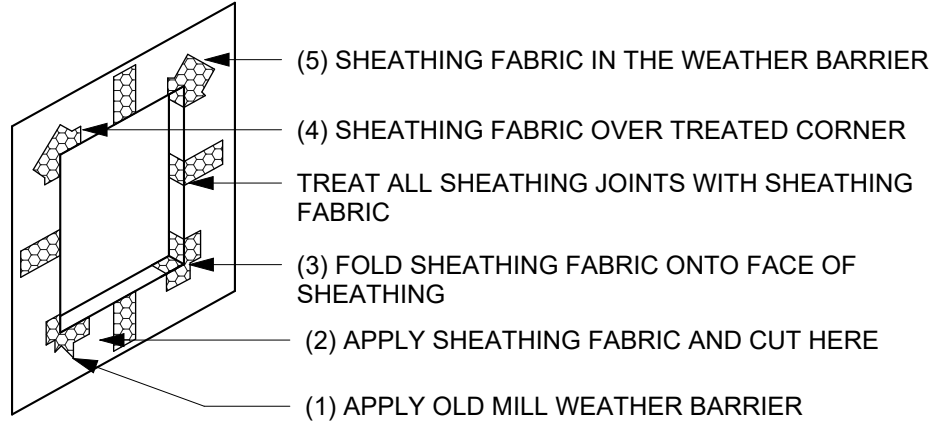


OMWB-02 2401 NOTES:

- ENSURE OM JOINT FABRIC IS EMBEDDED IN OM WEATHER BARRIER.
- ENSURE OM WEATHER BARRIER AND OM JOINT FABRIC ARE INSTALLED WITHOUT VOIDS AND PINHOLES.
- APPLY OLD MILL JOINT FABRIC OVER PUNCHED STUD OPENINGS

STEP 1 - CORNERS AND JOINTS APPLICATION

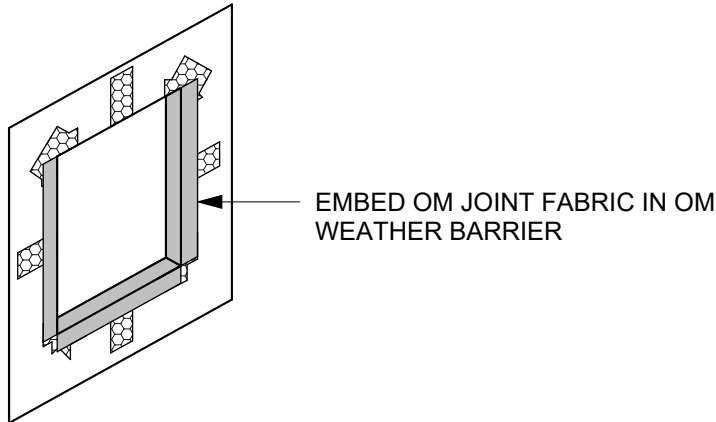

STEP 2 - SILL APPLICATION

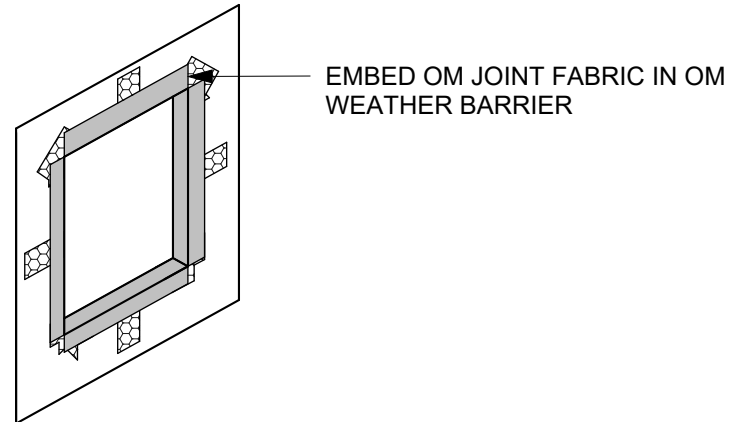

STEP 3 - JAMB APPLICATION

STEP 4 - HEAD APPLICATION

DRAWING NUMBER	SCALE	DATE	SHEET SIZE	REVISION	DISCLAIMER
DT128	1/4" = 1'-0"		A4		This technical detail serves as a guide for the appropriate use of Old Mill Building Products™. It is the responsibility of the customer's project designer to ensure that the product is fit for purpose by providing specialized design and detailing. The designer should consider any specialized factors of the project while assessing product suitability. It is essential to review this specification detail alongside the relevant product installation guide and all other appropriate technical literature related to Oldmill Brick™ products at the time of installation.